


ELITE LETTERBOXES

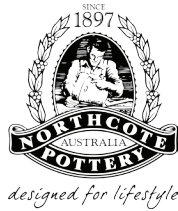

CALOUDRA LETTERBOX INSTALLATION INSTRUCTIONS

Concreting your Letterbox into the ground:

1. Inside the base of each letterbox post is an anchor post, which is bolted to the inside of the frame.
2. Undo each bolt, and turn the anchor posts around so both the anchor posts are sticking out at the base of each post frame, then re-attach the bolts.
3. Measure the space between the anchor posts, and dig two holes at the desired location to match the spacing.
4. Place the anchor posts into the holes, positioning the letterbox frame so it is square and level, then pour concrete into the holes.
5. Once the concrete holes have set, your letterbox is ready to use.

Please note: Before concreting, ensure the anchor posts are attached to the timber frame – do not attempt to concrete the anchor posts by themselves. Try to avoid concreting the letterbox frame into the ground, it is preferable that only the anchor posts go into the concrete.

Maintaining the Timber Panels:

As wood is a natural product, the colour and grain of the timber panels may vary slightly to the photograph on the product packaging.

The original colour and appearance of the timber panels on your letterbox will be affected by exposure to the natural elements. This is normal and is to be expected.

To maintain the appearance of the timber panels for many years to come, apply a good quality timber oil or varnish regularly. A wood stain can also be used to tint the timber to the desired colour.

Letterbox - Back

